








**SCHEMA DI MONTAGGIO/assembling scheme**



KIT 2 STAFFE PER ATTACCO TRAVI SU CASSETTIERE O MOBILI LATERALI

kit 2 stirrups for fixing beams with pedestals or lateral cabinets

**ART.728**

CODICE code	<b>777 700 585</b>
DISEGNO drawing	<b>SM 52005</b>
DATA date	12-05-2010
PAGINA page	1/1

CODE	COLOUR	CODE	Ø x L	COLOUR	CODE	Ø x L	COLOUR	CODE	COLOUR	CODE	COLOUR	CODE	COLOUR	CODE	COLOUR
407002219	ARGENTO silver	505091903	8 x 15	NERO 5/16" x 9/16" - Black	506223008	6MA x 15	ZINCATA 6MA x 9/16" - Zinc Plated	404079219	GRIGIO grey	505210522	ZINCATO Zinc Plated	507000010	ZINCATO Zinc Plated	505182201	FERRO iron
	P x 2		Q x 6		A x 6		G x 2		H x 6		L x 6		B x 1		

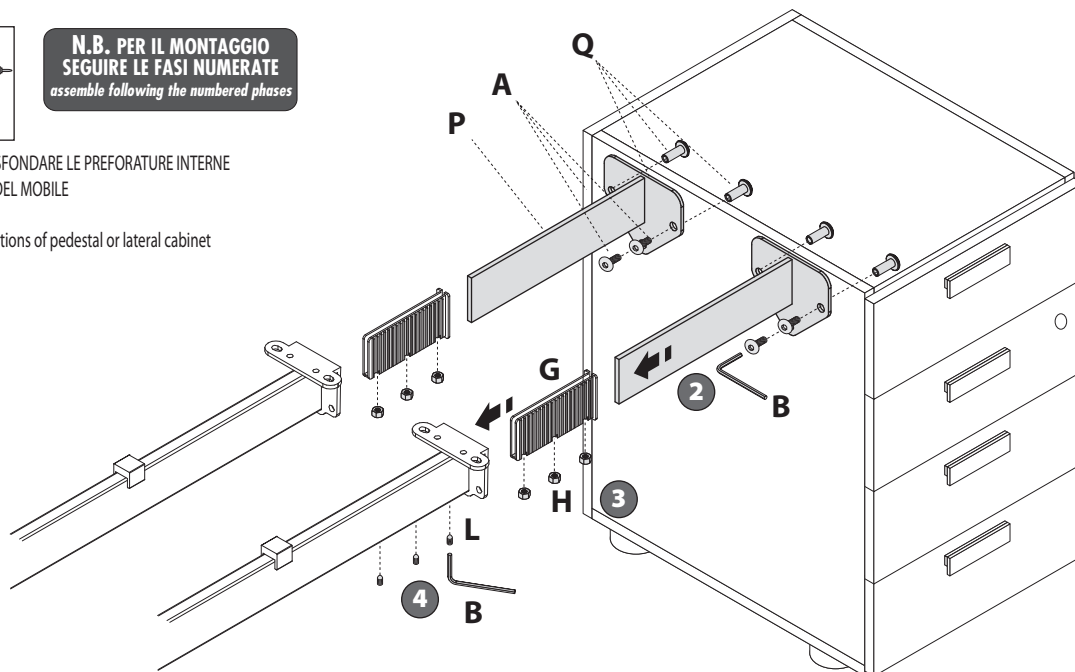


**N.B. PER IL MONTAGGIO  
SEGUIRE LE FASI NUMERATE**  
assemble following the numbered phases

PER FISSARE LE STAFFE SFONDARE LE PREFORATURE INTERNE  
DELLA CASSETTIERA O DEL MOBILE

for fix the stirrups

break the inside perforations of pedestal or lateral cabinet



CASSETTIERE O MOBILI LATERALI  
pedestals or lateral cabinets








**SCHEMA DI MONTAGGIO/assembling scheme**



KIT 2 STAFFE PER ATTACCO TRAVI SU CASSETTIERE O MOBILI LATERALI

kit 2 stirrups for fixing beams with pedestals or lateral cabinets

**ART.728**

CODICE code	<b>777 700 585</b>
DISEGNO drawing	<b>SM 52005</b>
DATA date	12-05-2010
PAGINA page	1/1

CODE	COLOUR	CODE	Ø x L	COLOUR	CODE	Ø x L	COLOUR	CODE	COLOUR	CODE	COLOUR	CODE	COLOUR	CODE	COLOUR
407002219	ARGENTO silver	505091903	8 x 15	NERO 5/16" x 9/16" - Black	506223008	6MA x 15	ZINCATA 6MA x 9/16" - Zinc Plated	404079219	GRIGIO grey	505210522	ZINCATO Zinc Plated	507000010	ZINCATO Zinc Plated	505182201	FERRO iron
	P x 2		Q x 6		A x 6		G x 2		H x 6		L x 6		B x 1		

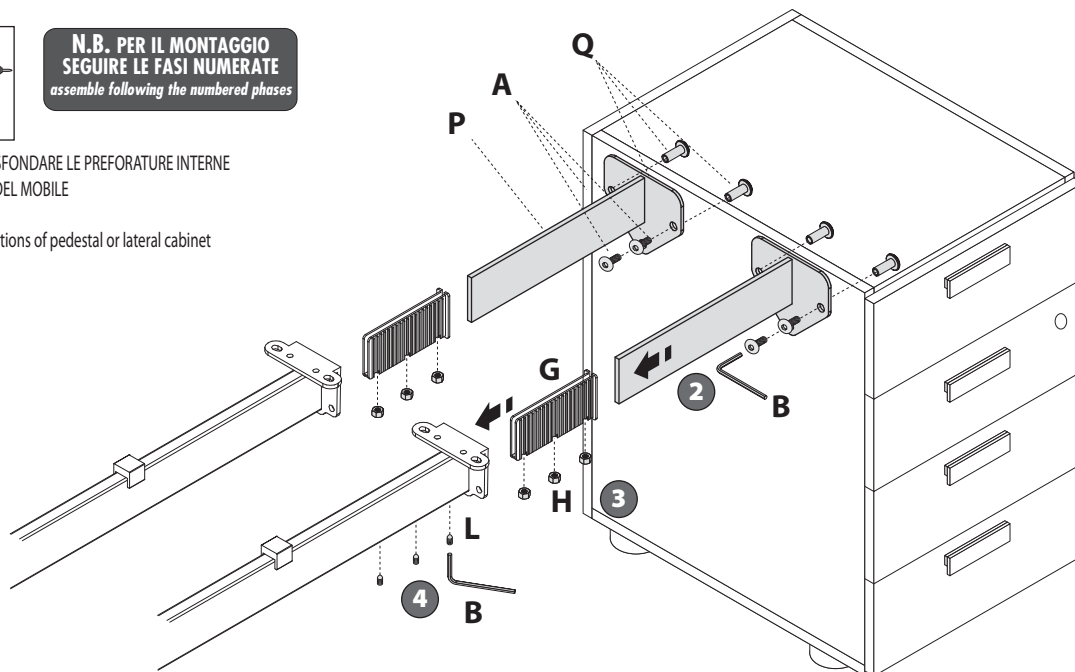


**N.B. PER IL MONTAGGIO  
SEGUIRE LE FASI NUMERATE**  
assemble following the numbered phases

PER FISSARE LE STAFFE SFONDARE LE PREFORATURE INTERNE  
DELLA CASSETTIERA O DEL MOBILE

for fix the stirrups

break the inside perforations of pedestal or lateral cabinet



CASSETTIERE O MOBILI LATERALI  
pedestals or lateral cabinets